

# | Mode 2 EV Charging Cable

IC-CPD (In Cable Control and Protection Device)



# User Manual

EVXxxB (wifi) series

## Important:

Read this User Manual before you start using the device!

## CONTENTS

SAFETY INFORMATION.....	2
PRODUCT INFORMATION.....	3
OPERATION INSTRUCTIONS.....	5
TEMPERATURE CONTROL (optional).....	16
FAULT HANDLING.....	17
MAINTENANCE.....	18

# SAFETY INFORMATION

Any other use will be deemed improper and may result in severe injury or damage to property. The manufacturer and dealers will not accept any liability for damage caused by improper use. What's more, the device warranty becomes void in such cases.




## WARNING


Failure to observe these warnings can lead to electric shock or fire, or damage the charging device.


- ◆ If damage occurs while charging, disconnect the charging device immediately from the power mains, if possible by switching off the mains fuse/circuit breaker. Do not touch any electrically live parts.
- ◆ Never operate the device near ex-plosive vapours or gases, switching operations within the device can generate tiny electric.
- ◆ Never touch the contact surfaces of the charging device. Do not insert any objects into the charging equipment connector faces.
- ◆ Do not attempt to modify or repair your charging device in any way yourself. Never open the housing, and do not make any changes to the adapters and/or extension cables.
- ◆ Do not plug the device into power outlets through which water could ingress the device. Do not immerse the charging device in water.
- ◆ Never disconnect the device connectors while the device is electrically live (i. e. while charging a vehicle), As this can lead to fouling of the connector plug contacts and damage the charging electronics. Always stop the charging process first at the controls inside the vehicle.
- ◆ Protect the plug connectors and power sockets against humidity and moisture. Always keep the plugs and the vehicle end coupling dry. Unplugged connectors are not watertight. Always cover them with the protective caps when not in use.
- ◆ Do not let children play with the packaging material or the charging device.


# PRODUCT INFORMATION


## Power and Vehicle connector


 UK plug (max.13A)


 Schuko (max.16A)


 CEE16/32(1-phase)

 CEE16/32(3-phase)

 Type 1(SAEJ1772 North American Standard)

 Type 2 (IEC62196-2 European Standard)

 Type GB (GB/T20234 China Standard)

 NACS Tesla(SAE J3400)

## Model number definition

EVX    □ □    □    □  
 ①        ②        ③        ④

	Classification	Symbol	Meaning of the symbol
①	Basic type	EVX	X series EV charger
②	Rated power	03	1-phase 16A
		07	1-phase 32A
		10	1-phase 40A
		11	3-phase 16A
		22	3-phase 32A
③	Charging modes	B	Mode 2
④	Charging interface	T2	Type2(IEC62196-2)
		T1	Type1(SAE J1772)
		GBT	GB(GB/T20234)
		NACS	Tesla(SAE J3400)

## Specifications

### Electrical Specifications

Phase Number	1-phase			3-phase	
Product Model	EVX03B	EVX07B	EVX10B	EVX11B	EVX22B
Rated Voltage	AC110V/240V			AC400V	
Input Frequency	50/60Hz				
Max.output Current	16A	32A	40A	16A	32A
Max.output Power	3.7kW	7.4kW	9.6kW	11kW	22kW
Cable Specification	3x2.5mm <sup>2</sup>	3x6mm <sup>2</sup>	9AWG	5x2.5mm <sup>2</sup>	5x6mm <sup>2</sup>

## Protection

Over voltage protection	Yes
Under voltage protection	Yes
Over load protection	Yes
Short circuit protection	Yes
Leakage protection	Yes
Over-temp protection	Yes

## Function and Accessory

LED indicators	Yes
LCD screen	1.47-inch
RCMU	Type A (Type B optional)
Current adjustment	Yes
WIFI / Bluetooth	Yes
RFID	No

## Working environment

Protection degree	IP 67
Operation temperature	-30°C ~55°C
Relative humidity	≤95%RH
Operating elevation limit	≤2000m
Cooling	Natural air cooling
Standby power consumption	<2W

## Mechanical parameters


Charging cable	5m (Standard configuration)
Control box	HxWxD=195mm*91mm*49mm
Weight	≤3kg
Colour & Material	Black ; PC

## Standard&Certificate







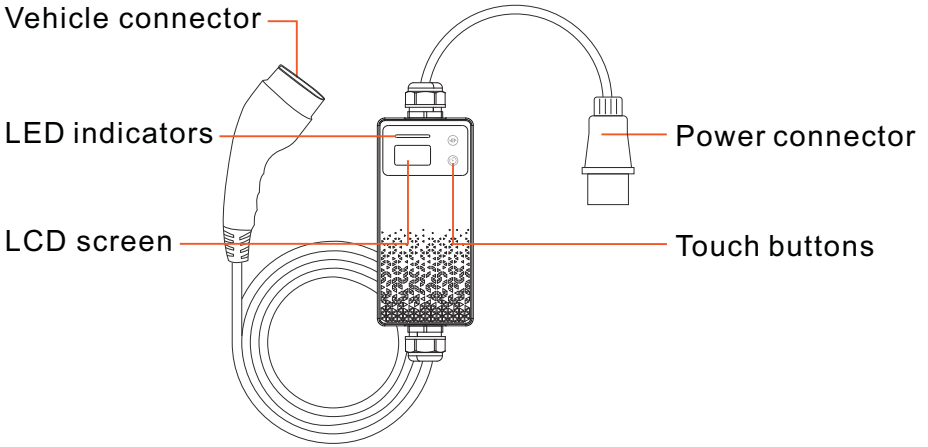



Standard	EN IEC 62752:2024
Certificate	CE , RoHS

# OPERATION

## Overview



## LED indicators

Status	Power On			Charging Standby	Setting Mode
Indicator Light	 Light	→  Light	→  Light	 Breathing	 Light
Status	Delay Charging	Waiting Car Signal	Charging Finished	Charging Mode	Fault Mode
Indicator Light	 Breathing	 Breathing	 Light	 Breathing	 Flashing

## Touch buttons




Setting Current / Menu / Change Setting



Delay Charging / Select Settings


## LCD screen

The LCD screen of the device can view status, safety warnings, and settings.

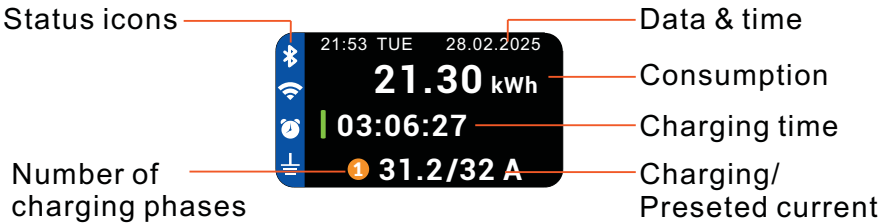

Icon	Connotation	Icon	Connotation
	Bluetooth enable		Reservation enable
	Bluetooth connected		Grounding connected
	Wi-Fi connected		

# Status display

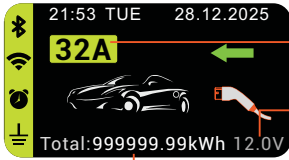

Preseted current


CP voltage

Total electricity


## Charging Standby

### Touch button


- Enter [ Setting Current ] page.
- Press and hold for approx.3 seconds to enter [ Settings ] page.
- Enter [ Setting Delay ] page.

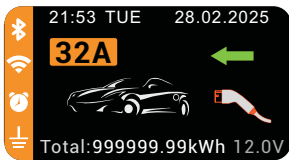

Setting Current

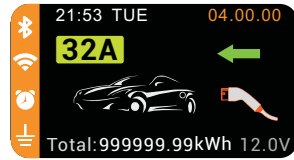


Setting Delay

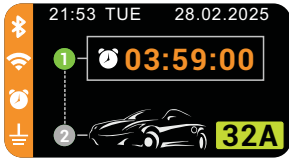

## Delay / Reservation charging

During the process of delay or reservation charging, step 1 (green circle) flashes and step 2 is gray.

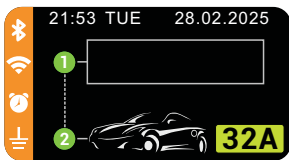

## Waiting Car Signal

During the process of waiting for the car signal, step 1 (green circle) remains on and step 2 flashes.

# Status display




## Charging Mode-1

Display consumption ,charging time, charging / preseted current.

### Touch button

 Enter [Charging Mode-2] page.

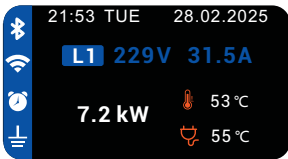

## Charging Mode-2

Display voltage and current ,charging power, temperature.


### Touch button

 Enter [Charging Mode-1] page.



## Charging Finished



Display consumption and total charging time.

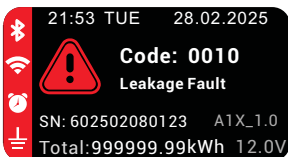



## Fault Mode

Display fault information, fault codes.
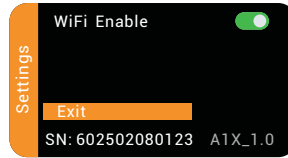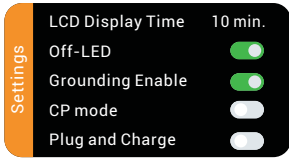
# Setting display



## Button function description

-  Select the function items that need to be set.
-  Set the selected functions. "Exit" returns to standby charging.

## LED Display Time

Turn off the screen after the set display time without touching the button or the status has not changed.

## Off-LED

If Off-LED is enabled, the LED will turn off simultaneously with the LCD.

## Grounding Enable

The charger is installed in an ungrounded or poorly grounded power grid, and grounding can be turned off.

## CP mode

It is designed to be compatible with certain vehicle models that trigger EV diode fault, simply enabling it will allow for normal charging.

## Plug and Charge

Once Plug and Charge is enabled, you can start charging when the vehicle plug connected, no other authorization required.

## WiFi Enable

The device needs to be set with wireless name and password through the APP, and you can also set static IP address.


# Setting Current

1. Press the  button ( **before plugging the vehicle-end connector into the vehicle's charging socket** ).




 Light

The yellow LED begins to light, and the LCD screen displays the amperage. Indicating that the device is ready to change the charge intensity.

2. Press the  button as many times as necessary until the screen is at the desired amperage.
3. The selected setting will be saved automatically after approx.3 seconds, then the device enters charging standby. The upper left corner of the screen displays the set amperage.


# Delay charging

1. Press the  button ( **before plugging the vehicle-end connector into the vehicle's charging socket** ).




 Light

The yellow LED begins to light, and the LCD screen displays the time. Indicating that the device is ready to change the delay charging time.


2. Press the  button as many times as necessary until the screen is at the desired time.
3. The selected setting will be saved automatically after approx.3 seconds, then the device enters the countdown state. Wait for the countdown to end and if already connected to the vehicle, it will enter charging mode.

# Exit delay charging


If you want to exit the delay charging, press and hold down the  button for approx.3 seconds. Then the device returns to charging standby.

## Start charging

1. Connect the power plug of the charger to a grounded outlet, wait for the device to enter charging standby.
2. Couple the vehicle-end connector of the device to the vehicle's charging port.
3. Enter the reservation page ( If delay or reservation is enabled ). Use APP to skip countdown for charging.
4. Wait for the vehicle authorization signal, and then enter the charging mode.

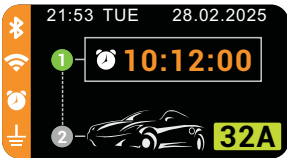


Delay / Reservation charging

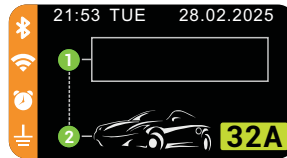

Waiting Car Signal



Charging Mode-1

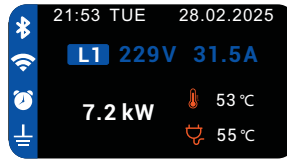

Charging Mode-2

## Stop charging

1. Stop the charging process at the controls inside the vehicle, this releases the lock on vehicle's charging coupling.
2. First disconnect the connector coupled to the vehicle, then unplug the connector plug from the power socket or the charging station.

# Installing the App

1. Download and install the app on Google Play or App Store.
2. Allow Bluetooth functionality on your smartphone or tablet, and enable **location** permission on the EV-Charger app.



EV-charger  
Utilities

EV-Charger

EV-Chargergo



## Registration

You must register before using the APP.

**Note: It is not technically possible to use the app without registering.**

Please note the privacy policy for the processing of your personal data in the app.

1. Open the EV-charger app, select the language for the app in the top right-hand corner and click on **Register** (Fig. 6)
2. Enter your **email address** and click on **Get code**. You will receive an email with a **6-digit code**. Enter the code in the **Verification code** field.
3. Enter a secure password that you can save in a password manager or memorise.
4. Click on **Register**. Your user account is created and you are automatically logged into the app (Fig. 7).

Fig.6

Fig.7

## Connecting the charging station

The charging station is first connected via the Bluetooth connection. Once the connection has been established, the wallbox can be connected via WiFi.

1. Switch on the charging station and hold the smartphone or tablet within range of the charging station.
2. Start the app and tap on the **QR code symbol** or the **plus symbol** in the top right-hand corner (Fig. 8).
3. Now scan the QR code of the charging station, which you will find on the operating instructions and under the housing cover of the charging station.
4. After the QR code has been scanned, enter the **6-digit PUK** and click on **Confirm add** (Fig. 9).
5. The app now searches for the charging station and adds it automatically.

**Note: Accept the authorisations for camera and location that the app requests. Without the permissions, the code cannot be scanned and the charging station cannot be found.**

Fig.8

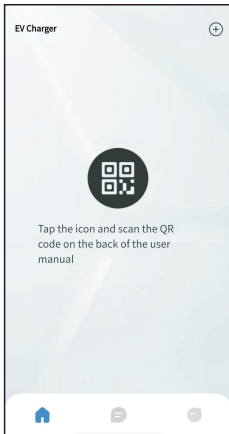
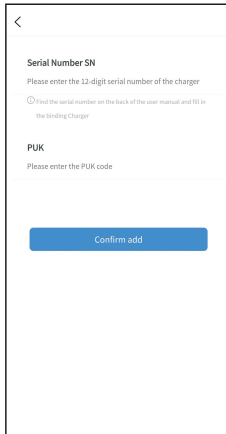


Fig.9

The screenshot shows two input screens. The top screen is titled 'Serial Number SN' and asks the user to 'Please enter the 12-digit serial number of the charger'. Below this, there is a small note: 'Find the serial number on the back of the user manual and fill in the Serial Number field'. The bottom screen is titled 'PUK' and asks the user to 'Please enter the PUK code'. At the bottom of the second screen, there is a blue button labeled 'Confirm add'.

# WiFi connection

Once the charging station has been connected via Bluetooth, you will find it in the app overview. To connect the charging station to an existing WiFi network, proceed as follows:

1. Select the charging station in the app on the overview page (Fig.10).
2. Tap on the **WiFi symbol**.
3. Enter the **name** and **password** of your WiFi network and click on **OK**. (Fig. 11).
4. The charging station will now attempt to connect to the data you have entered.
5. As soon as the charging station is connected to the WiFi, the **WiFi symbol** lights up on the display of the charging station. Check that the charging station is connected to the network by opening the **WiFi menu** of the charging station.
6. Go back to the overview in the app by tapping on the **arrow** at the **top left** and refresh the view by **swiping from top to bottom** in the app.
7. The charging station is connected to WiFi when „**Online**“ is displayed in the overview page and the **WiFi symbol** on the status page is blue (Fig. 12).

**Note: Leave the DHCP switch switched on to enable automatic IP address assignment.**

Fig.10

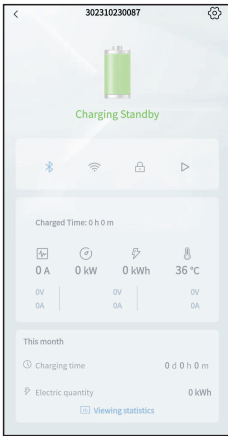


Fig.11


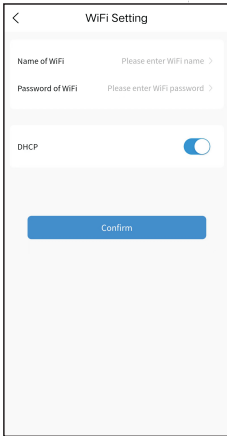


Fig.12




# App Overview


## Overview of charging stations

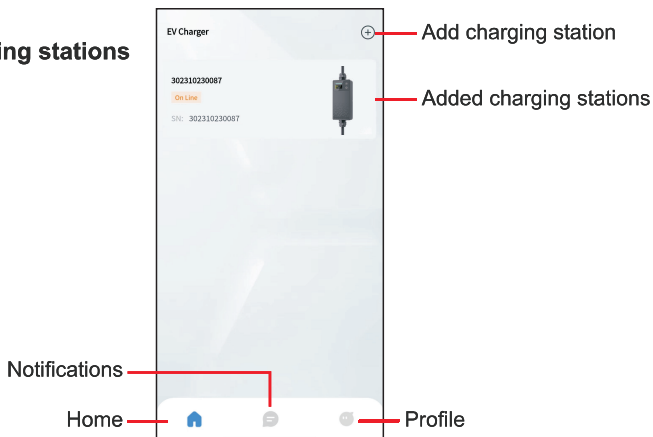


## Detail page of charging station

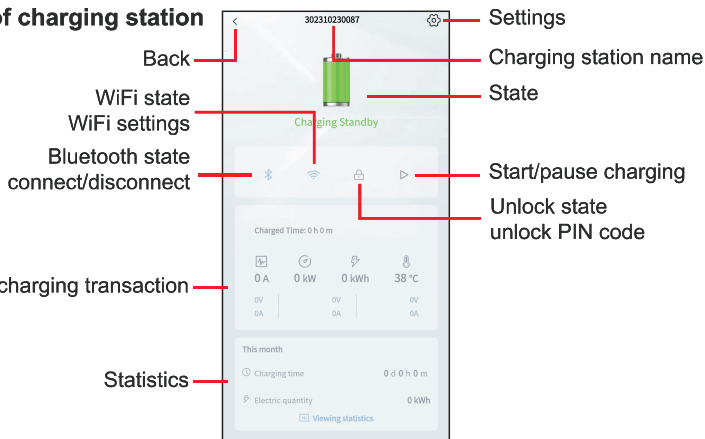

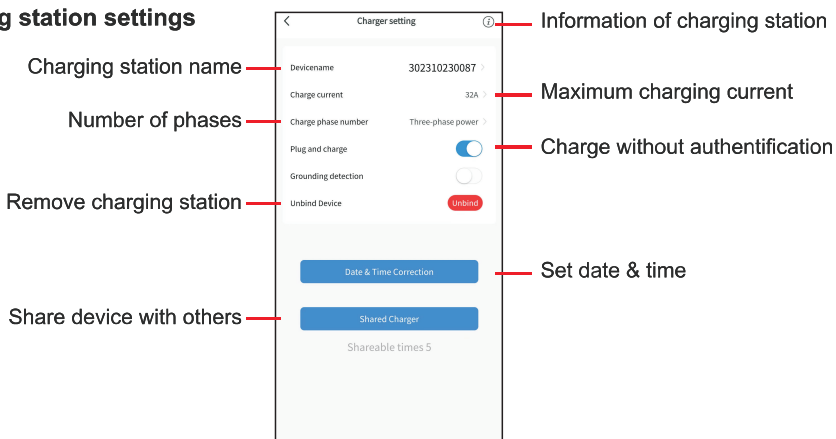

## Charging station settings

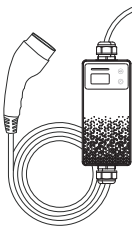


# TEMPERATURE CONTROL (optional)



## Power plug with temperature sensor


	UK plug (max.13A)	CEE16/32A
	Schuko (max.16A)	.....

The power plug contains a temperature sensor inside. This temperature sensor is a negative temperature coefficient thermistor (NTC), which can feedback the temperature change of the power plug in real time.

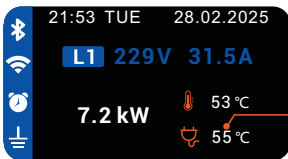

Charging Mode

Real time  
Temperature

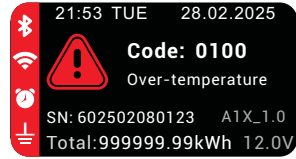

Fault status

## Control process

- ◆ When the temperature of the power plug reaches up to 95°C and lasts 10 seconds, the temperature control protection is turned on, the charging is stopped, and the LCD screen displays the over-temperature fault.
- ◆ After waiting for the power plug cooling down to 75°C and lower and lasts 10 seconds, the device will automatically start to continue charging again.

## Fault handling

- ◆ Check power plug and socket are in close contact.
- ◆ Check the cable diameter of the socket.
- ◆ Do not leave the device exposed to sunlight, but also do not cover it.

# FAULT HANDLING

The device is automatically protected in the event of the fault. The fault information and handling methods are as follows.

Fault information	Handling method
Both the LED and LCD screen are not on	<ul style="list-style-type: none"> <li>◆ Check whether the power supply and distribution are normal.</li> <li>◆ Check breaker is tripped, and open the breaker after troubleshooting.</li> </ul>
LED on, and LCD screen not on	<ul style="list-style-type: none"> <li>◆ LCD connection cable is loose or LCD is damaged.</li> </ul>
Waiting car signal for a long time	<ul style="list-style-type: none"> <li>◆ Battery of car is full, the car is in the reservation delay charging mode, or the vehicle connector is not properly connected.</li> <li>◆ Disconnect and reconnect the vehicle connector.</li> </ul>
Ground Fault Code: 0001	<ul style="list-style-type: none"> <li>◆ The device is not grounded, check the input power cable.</li> </ul>
RCMU Fault Code: 0002	<ul style="list-style-type: none"> <li>◆ The RCMU is damaged and needs to be returned to the factory for repair.</li> </ul>
Over voltage Code: 0004	<ul style="list-style-type: none"> <li>◆ Check whether the input cable is connected correctly.</li> <li>◆ Check whether the input voltage is abnormal.</li> </ul>
Under voltage Code: 0008	<ul style="list-style-type: none"> <li>◆ Check whether the input cable is reliably connected.</li> <li>◆ Check whether the input voltage is abnormal.</li> </ul>
Leakage Fault Code: 0010	<ul style="list-style-type: none"> <li>◆ Check whether the vehicle connector and it's cable are damaged or wet.</li> <li>◆ Recover after pulling out the mains connector.</li> </ul>

Fault information	Handling method
Over current Code: 0020	<ul style="list-style-type: none"> <li>◆ Check whether the vehicle connector is correctly connected.</li> <li>◆ Check whether the on-board charger is normal.</li> </ul>
CP voltage Code: 0040	<ul style="list-style-type: none"> <li>◆ Check the vehicle connector and charging socket of EV.</li> <li>◆ Disconnect and reconnect the vehicle connector.</li> </ul>
Short circuit Code: 0080	<ul style="list-style-type: none"> <li>◆ Check whether the vehicle connector and its cable are damaged or wet.</li> </ul>
Over temperature Code: 0100	<ul style="list-style-type: none"> <li>◆ Check power plug and socket are in close contact.</li> <li>◆ Check the cable diameter of the socket.</li> </ul>
EV diode Fault Code: 4000	<ul style="list-style-type: none"> <li>◆ Diode fault of CP signal at the vehicle end. Please check the vehicle or enter the settings menu to open CP mode.</li> </ul>

## MAINTENANCE

- ◆ Check whether the join point of the input terminal is in good contact and whether there is any abnormality.
- ◆ If plugs get wet, allow them to dry before using them.
- ◆ Always fit the device with the protective caps when not plugged in.

# ***ELECTRIC AND HYBRID VEHICLES***

Model: EVXxxB (wifi) series  
Rev. 0.1